



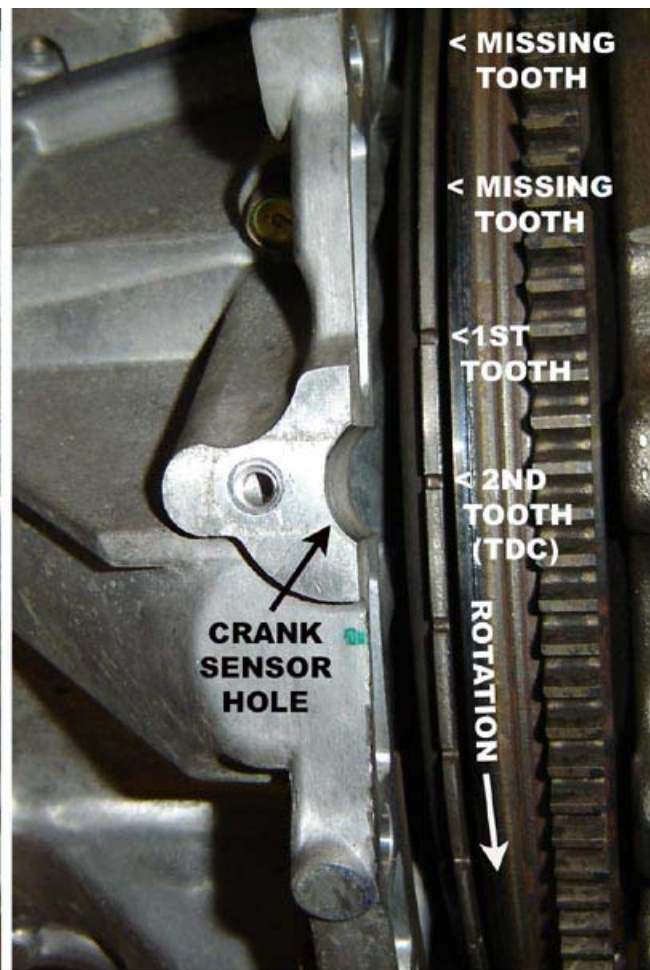

RWD VQ35 FLYWHEEL POSITION AT TOP DEAD CENTER #1 CYLINDER.

**Rotate engine to TDC, remove CAS
sensor at flywheel and confirm
position is same as above.**

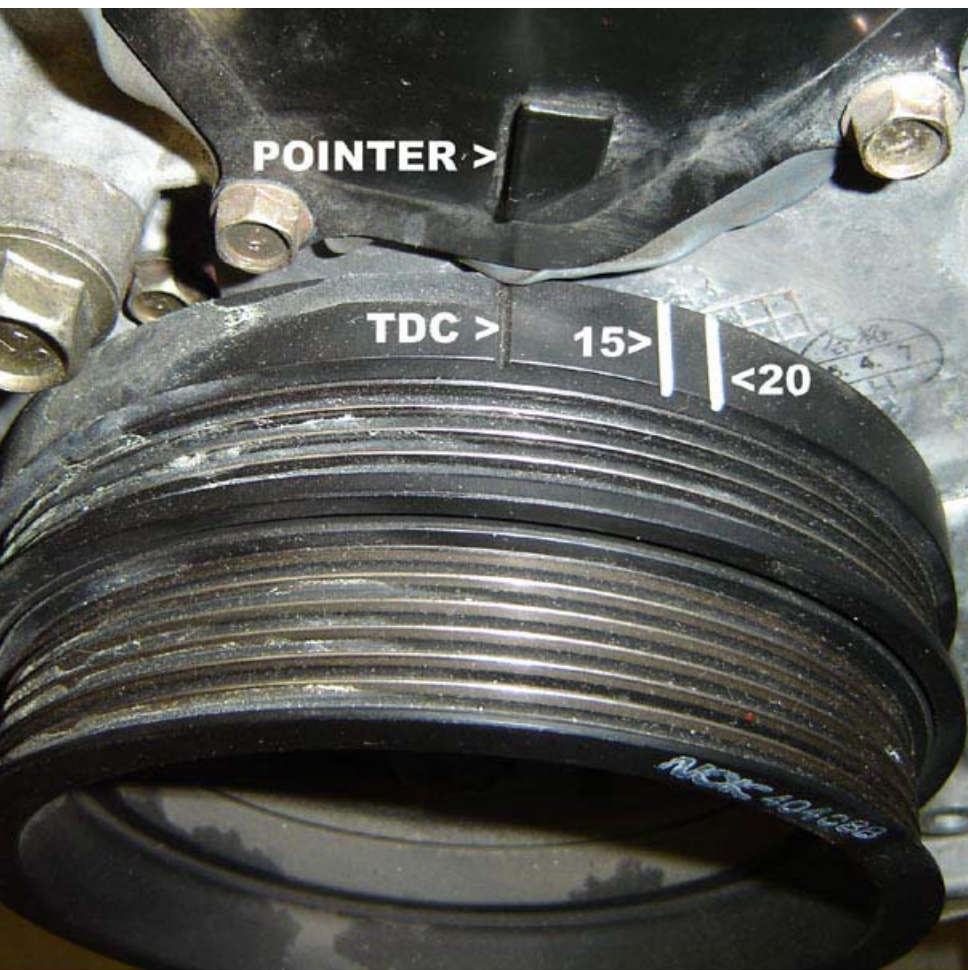